

Aluminum Slide Adapter Instructions


WHAT'S IN THE BOX

Aluminum Slide Adapter with 4-Hole Rotatable Pyramid (FND-134150) or
Aluminum Slide Adapter with 4-Hole Pyramid (FND-134125)
4 M6 X 16 Screws
4 M6 X 35 Screws
Instructions

Note: The pyramid dome on the Aluminum Slide Adapter is held in place by a magnet with an intensity of 28 gauss at the magnet surface, and 0 gauss at a distance of 4" from the surface. This intensity is comparable to that of a refrigerator magnet. Please share this information with the amputee, in the event that the amputee is wearing a pacemaker or any other device that could be affected by magnetism.

INSTALLATION

1. Using the four M6 X 16 screws included with the Slide Adapter, attach the Slide Adapter to the socket as shown. (Alternately, use the M6 X 35 screws that are also included with the Slide Adapter to attach the Slide Adapter to an Alpha Lock or Alpha Locking Lanyard.) Tighten the screws to 12 Nm or 9 ft-lbs.

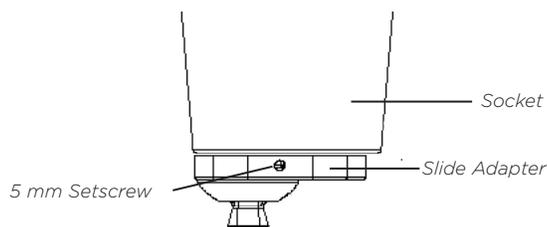

2. Connect a pyramid receiver component of your choice to the Slide Adapter. Tighten the setscrews using the torque and threadlocker specifications provided by the manufacturer of the pyramid receiver.

Note: the purpose of the 5 mm setscrew is only to keep the pyramid from sliding when angular adjustments are made. If the 5 mm setscrew is tight before attaching the receiver, it will prevent the dome from locking tightly against the housing and titanium pyramid.

3. To make a slide adjustment:
 - a. Loosen the 5 mm setscrew on the side of the Slide Adapter.
 - b. Loosen two adjacent 8 mm setscrews on the pyramid receptacle.
 - c. Slide the pyramid to the desired position.
 - d. Before tightening the 5 mm setscrew, tighten the 8 mm setscrews using the torque and threadlocker specifications provided by the manufacturer of the pyramid receptacle.
 - e. Hand-tighten the 5 mm setscrew on the side of the Slide Adapter.
4. To make a rotation adjustment (applicable only to FND-134150):
 - a. Loosen two adjacent 8 mm setscrews on the pyramid receptacle.
 - b. Rotate the pyramid to the desired position.
 - c. Tighten the 8 mm setscrews using the torque and threadlocker specifications provided by the manufacturer of the pyramid receptacle.

WillowWood®

The Ohio Willow Wood Company
15441 Scioto Darby Road
Mt. Sterling, OH 43143
phone 740.869.3377 / 800.848.4930
fax 740.869.4374 www.willowwoodco.com



Ohio Willow Wood Company B.V.
Keizersgracht 62/64
1015 CS Amsterdam
The Netherlands



WARRANTY

The warranty for the Aluminum Slide Adapter is one year from the date of invoice. Use of an Aluminum Slide Adapter for amputees whose adjusted body weight is more than 250 pounds (115 kg) or who engage in extremely high and abusive activities is against WillowWood's recommendation and will void the one-year warranty. Adjusted body weight is defined as the weight of the amputee plus any loads normally or routinely carried by the amputee. "Extremely high and abusive activities" are defined as activities such as skydiving, karate, and judo; activities that could result in an injury to an individual's natural foot.

WARRANTY DISCLAIMER

WillowWood warrants that each product manufactured will, at the time of delivery, be of workmanlike quality and substantially free of defects. WILLOWWOOD MAKES NO OTHER WARRANTY, IMPLIED, OR EXPRESSED, AND MAKES NO WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty shall terminate immediately upon an action to combine our products with other materials or in any manner to change the nature of our products. The sole remedy is replacement of the products or credit for the products. WillowWood's liability shall not exceed the purchase price of the product. WillowWood shall not be liable for any indirect, incidental, or consequential damage.

WILLOWWOOD RETENTION OF RIGHTS

WillowWood retains all intellectual property rights reflected or incorporated in its physical products, regardless of the transfer of the physical products to another party or parties.